

What to do if...
What to do if...



A tire punctures

P. 332 If you have a flat tire



The engine does not start

P. 98 Ignition switch
P. 343 If the engine will not start
P. 53 Engine immobilizer system
P. 348 If the vehicle battery is discharged



The engine coolant temperature gauge enters the red zone



Steam can be seen coming from under the hood

P. 351 If your vehicle overheats



The parking brake cannot be released

P. 345 If the parking brake cannot be released



The key/wireless remote control is lost

P. 344 If you lose your keys/wireless remote control transmitter



The battery runs out

P. 348 If the vehicle battery is discharged



The doors cannot be locked

P. 25 Doors



The rear hatch cannot be opened

P. 29 Rear hatch



The horn begins to sound

P. 55 Alarm

What to do if...



The vehicle is stuck in mud or sand

P. 354

If the vehicle becomes stuck



The engine oil temperature gauge enters the red zone



A warning light or indicator light comes on

P. 312

If a warning light turns on or a warning buzzer sounds...



OPI-078

nWarning lights



Brake system warning light (red)

or



P. 312



Malfunction indicator lamp



P. 314



Brake system warning light (amber)

P. 314



Driver's seat belt reminder light

P. 315



ABS warning light

or



P. 314



Passenger's seat belt reminder light

P. 315



Master warning light

P. 315



SRS warning light

P. 314



Electric power steering system warning light

P. 314



Open door warning light
P. 315



Slip indicator
P. 314



Charging system warning light
P. 313



Tire pressure warning light
P. 315



Low fuel level warning light



Engine coolant temperature warning light*

or

or



P. 315



P. 313



Engine oil temperature warning light*

P. 313

*: The light flashes to indicate a malfunction.

Clutch overheat

A warning message is displayed

P. 322

If a warning message is displayed